## WEEKLY PROGRAMMABLE

# ELECTRONIC TIMER

- **DIN Rail Installation**
- Advanced pre-setting one week before
- Latest technology COMS quartz Mico-controller
- Digital electronics general purpose time swich with daily and weekly programs
- Repeat programs with 8 ON/OFF settings.
- To-the-minute setting accuracy.
- LCD displays real time to Hour/Minute and ON/AUTO/OFF.

### ☐ TECHNICAL DATA

<b>a</b>	Voitage	limit.
#	vullaue	31111111

AC220V ~ 240V 50Hz

Number of circuits:

1 c

Hysteresis:

≤1s/d (at25°C)

Load capacity:

16A 250VAC (ohmic load cos Ø=1)

On/off operation: 8on & 8off

Service life:

Mechanically: 107

Minimum interval: 1 minute

Electrically: 105

Weight:

Approx 150g

♠ Ambient temperature: 0~40°C

Display;

LCD

storage temperature:

-20~70℃

5VA


Battery backup:


15day


Power consumption:

## □ DIMENSIONS

## **□** CONNECTIONS



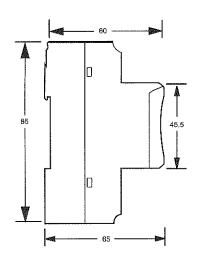



## □ OPERATING INSTRUCTION

- 1. First time use this timer swich, please input AC and let battery recharge .after then press reset key.
- 2. At first time, the timer swich is in 24h mode. If you you want change to 12h mode please press on "⊕" key 5 sce .and LCD will display AM If you want rechang to 24h mode ,and press on "⊕" key 5 sce to return.

#### 3. Programming:

Step	Key	Programming
1	Press <b>P</b>	Setting 1 ON time (display 1 on )
2*	Press D+	Select days of week ( If you want same set in every day, you need not press this key)
3	Press H+/M+	Set hours and minutes
4	Press P	Setting 1 off time (display 1 off)
5	Press <b>D+</b>	Select days of week ( If you want same set in every day, you need not press this key)
6	Press H+/M+	Set hours and minutes
7	Repeat step 2-6	Set 2-8 on/off time
8**	Press 🕒	End

For cancel engagements, press "MANUAL" then "- -:- -" is displayed on LCD to confirm cancel.

May press "MANUAL" again to resume initial setting.

\*10 deferent mode: (1.MO 2.TU 3. WE 4. TH 5. FR 6. SA 7. SU 8. MO TU WE TH FR 9. SA SU 10. MO TU WE TH FR SA SU )

\*\*IF you need not 8 time setting press" (9 "key to the end

### 4. CLOCK SETTING

- (1) Press "D" and "D+" together till correct date is shown.
- (2) Press " and " H+ " together till correct hour is shown.
- (3) Press " and " M+ " together till correct min is shown.
- (4) Press "MANUAL" key to display ON AUTO or AUTO OFF. (If this clock in your program is ON selects ON AUTO ,and this clock in your program is OFF selects AUTO OFF)
- 5. If you always want to use time switch ON or OFF,Please Press "MANUAL "key to display "ON" or "OFF".

#### □ NOTE:

THE POWER CONSUMPTION OF CONNECTED ELECTRICAL APPLIANCES, SHALL BE WITHIN . THE LIMITATION OF FOLLOWING RATED CAPACITY.